



DeviceLab


EXTRACTING VALUE

DeviceLab Payload Collector, - How to load keys!


The Payload Collector supports decrypting frames and for that use relevant keys must be loaded!

How to load keys from a Kamstrup "KEM file":

In the Payload Collector, open "Key management" and select "Load keys from KEM file".

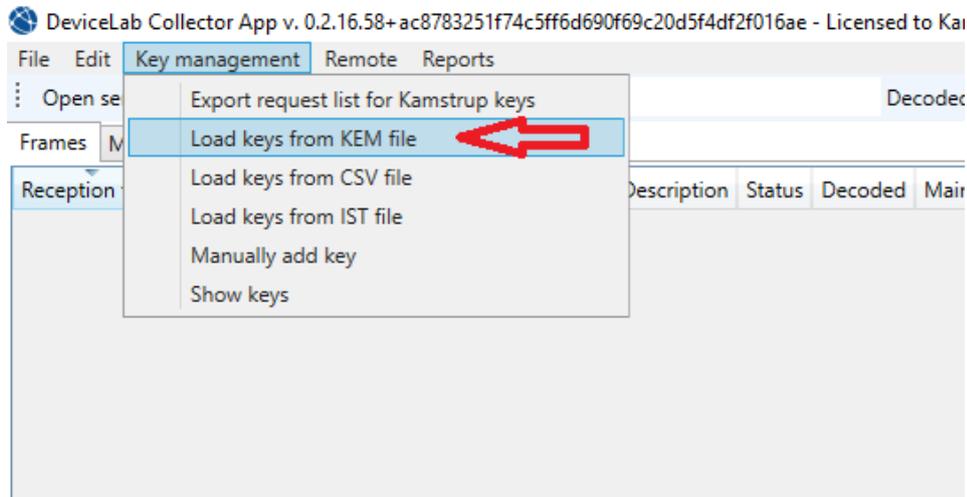

Locate and select the KEM file and Press "Open"

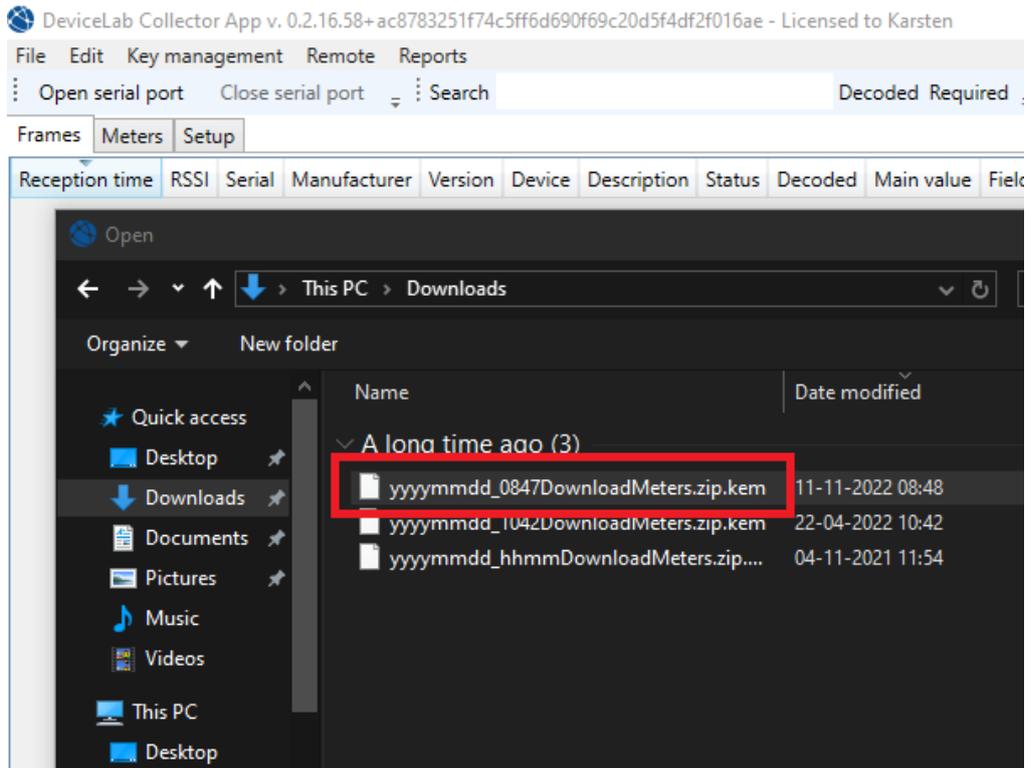




DeviceLab


EXTRACTING VALUE

Enter the KEM file password, press "OK" and the keys are loaded!

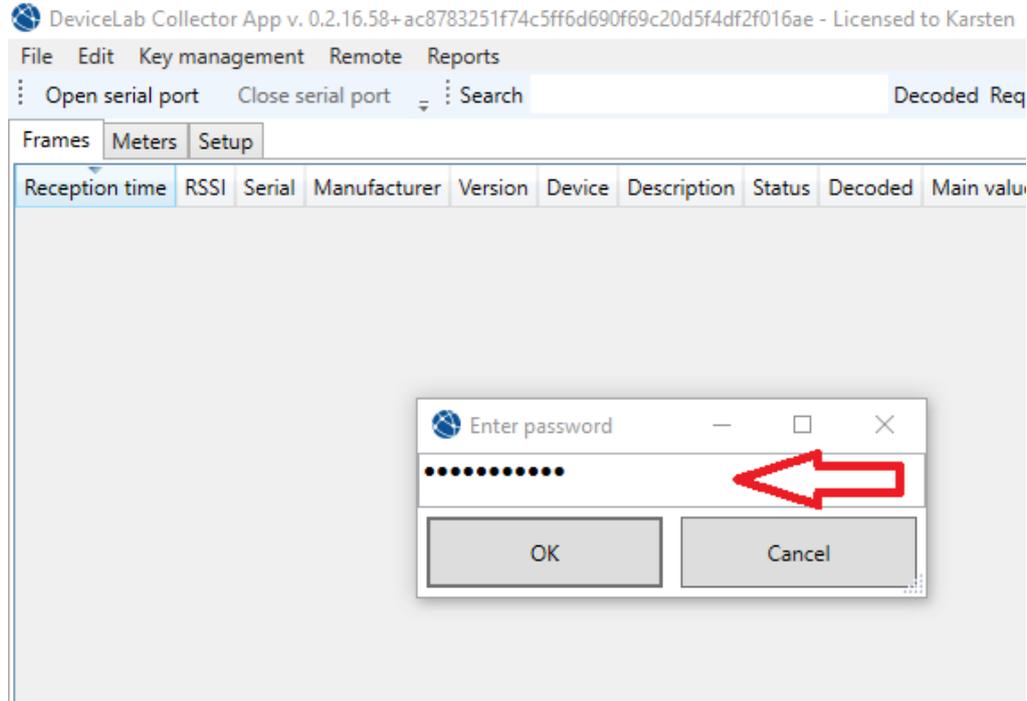

How to load keys from a "CSV file":

The format of the .csv file must be as follows...

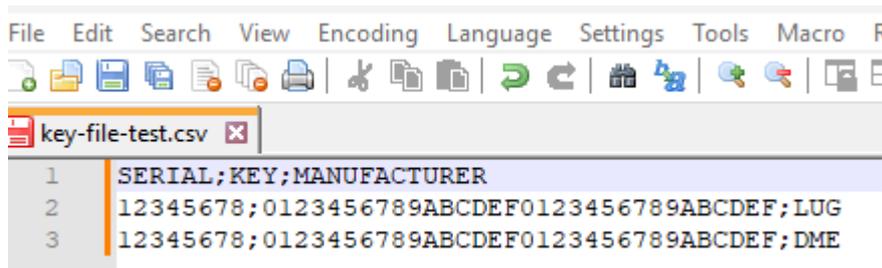

Example:


```
SERIAL;KEY;MANUFACTURER  
12345678;0123456789ABCDEF0123456789ABCDEF;LUG  
12345678;0123456789ABCDEF0123456789ABCDEF;DME
```




DeviceLab

EXTRACTING VALUE

In the Payload Collector, open "Key management" and select "Load keys from CSV file".

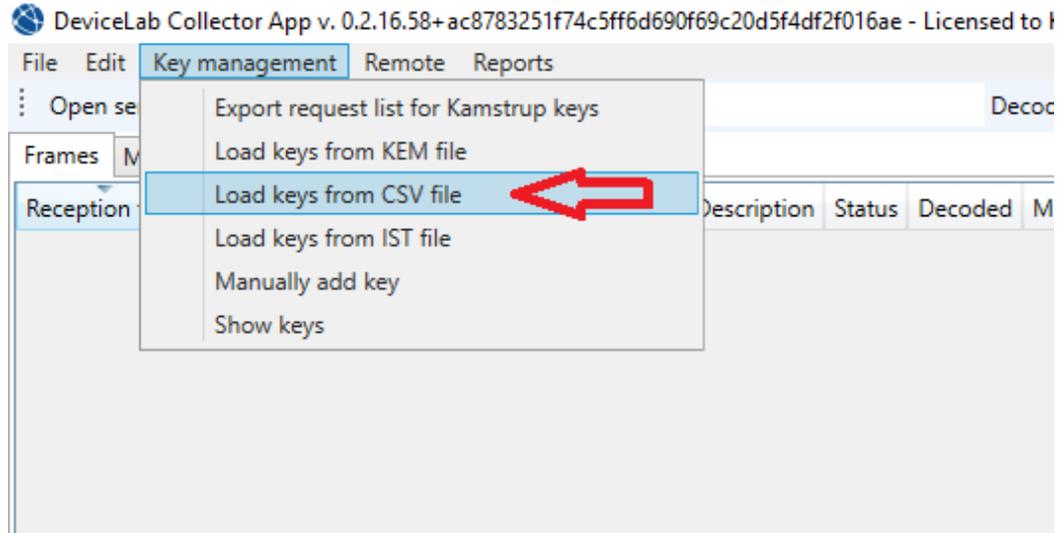

Locate and select the CSV file, press "Open" and the keys are loaded.

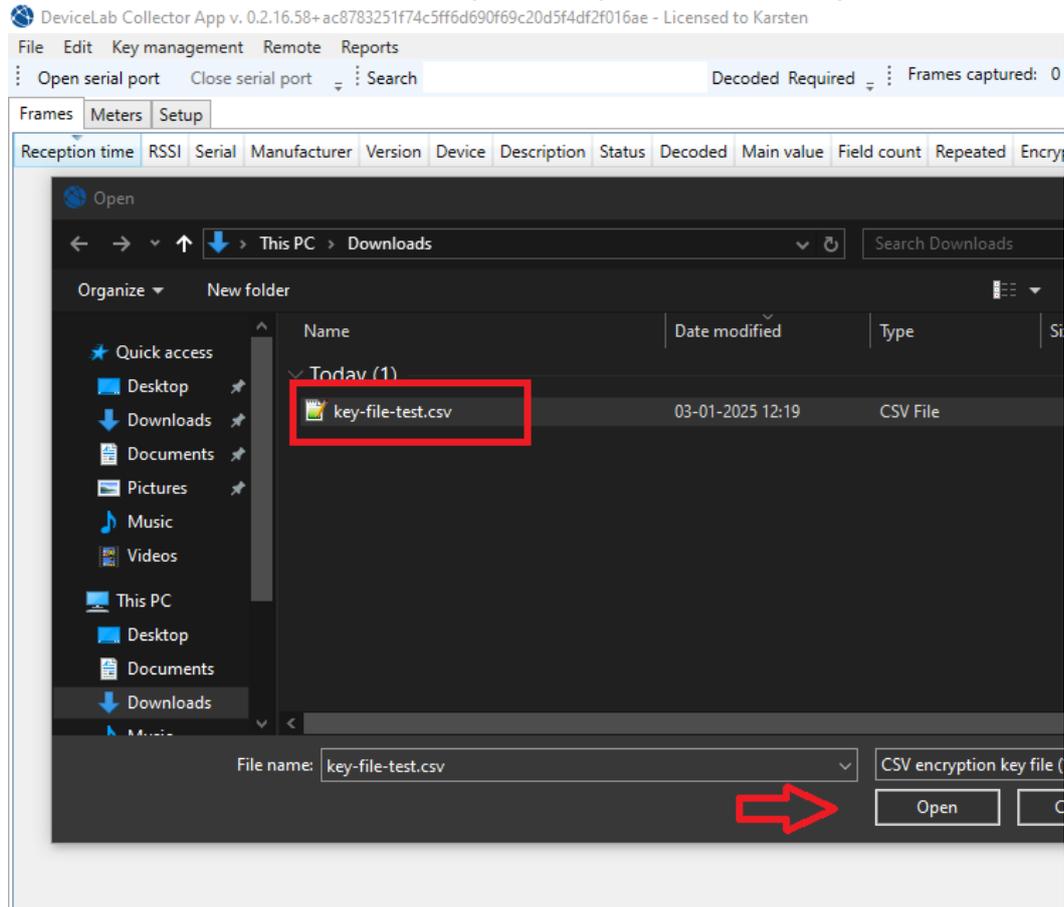




How to load keys from a "IST file":

If you have received a ISTA key file formatted as follows...

```
IST-keys.txt x
1 deviceID;Key
2 5112112345678;01-23-45-67-89-AB-CD-EF-01-23-45-67-89-AB-CD-EF
```

This can be loaded as a "IST file".

In the Payload Collector, open "Key management" and select "Load keys from IST file".

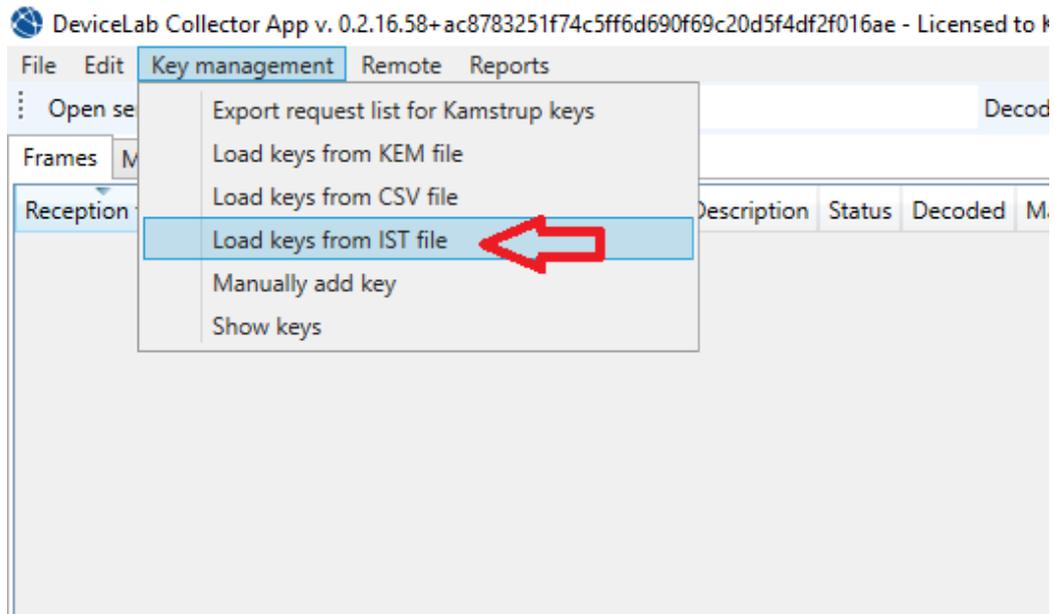




DeviceLab

EXTRACTING VALUE

Locate and select the IST file, press "Open" and the keys are loaded.

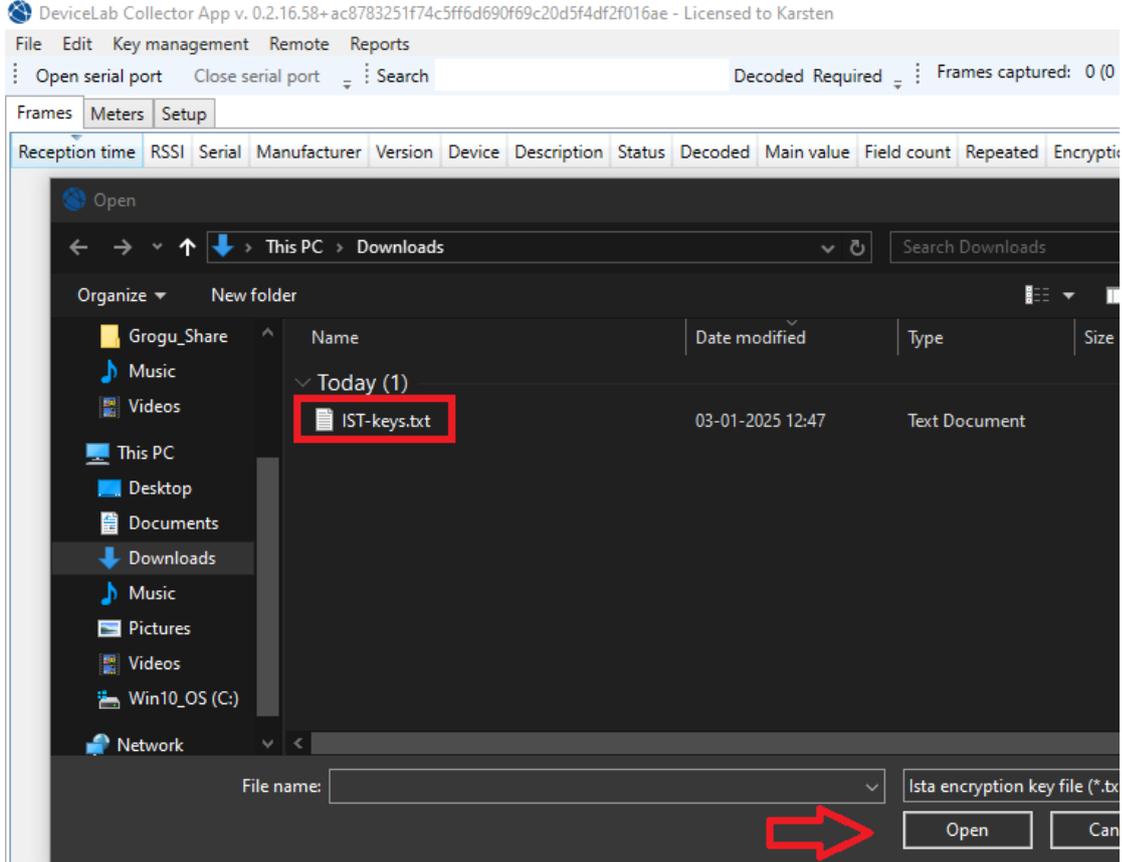





How to load keys "Manually":

Single keys can also be added manually...

In the Payload Collector, open "Key management" and select "Manually add key".

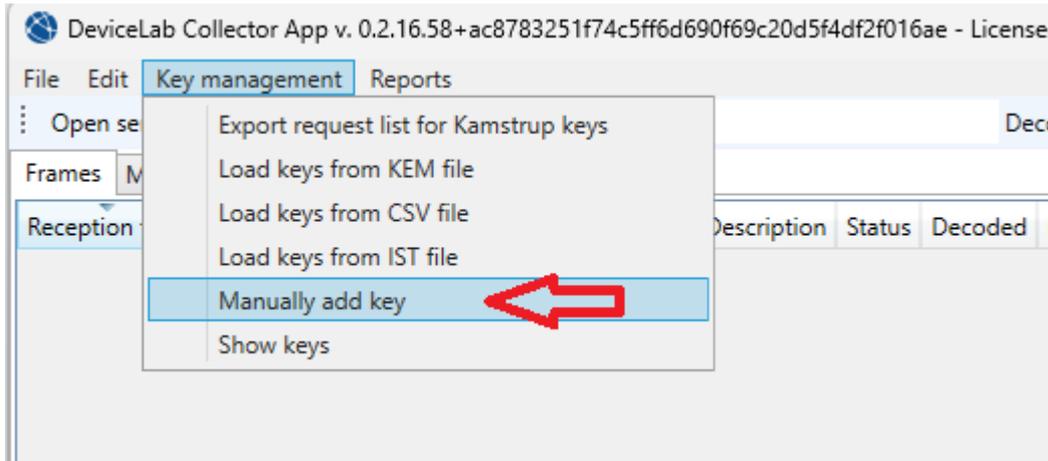

Enter "Manufacturer", "Serial", "Hexkey" and press "Add key" to load key!

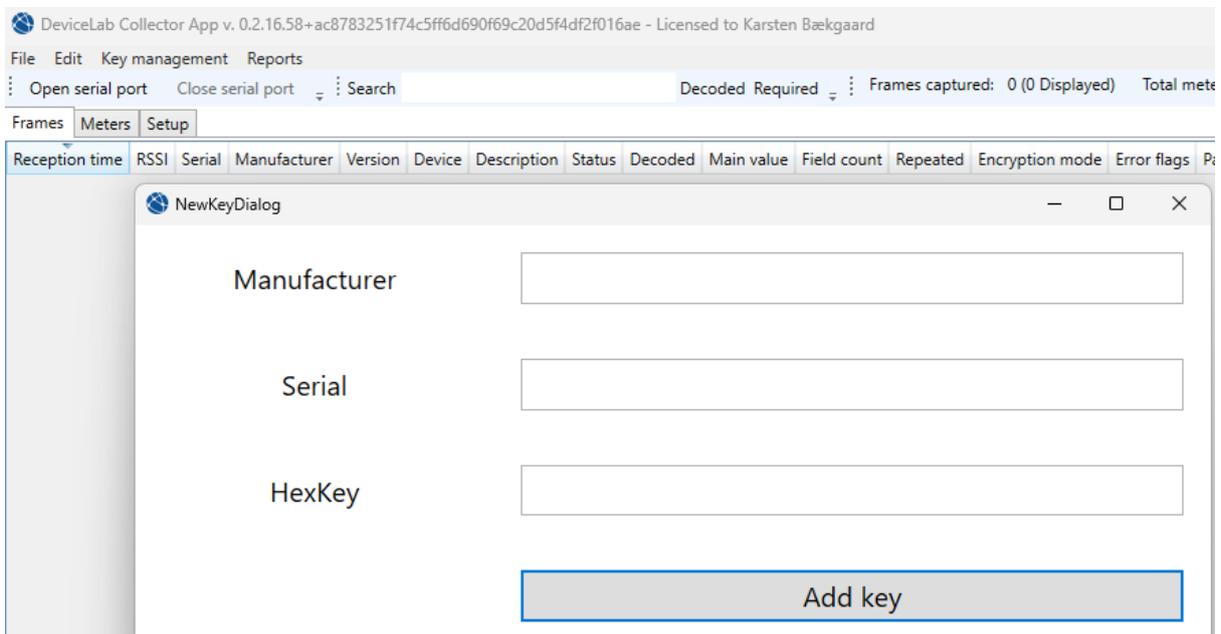





DeviceLab

EXTRACTING VALUE

Find devices with loaded keys:

Devices with a loaded key is shown in the Payload Collector under open "Show keys".

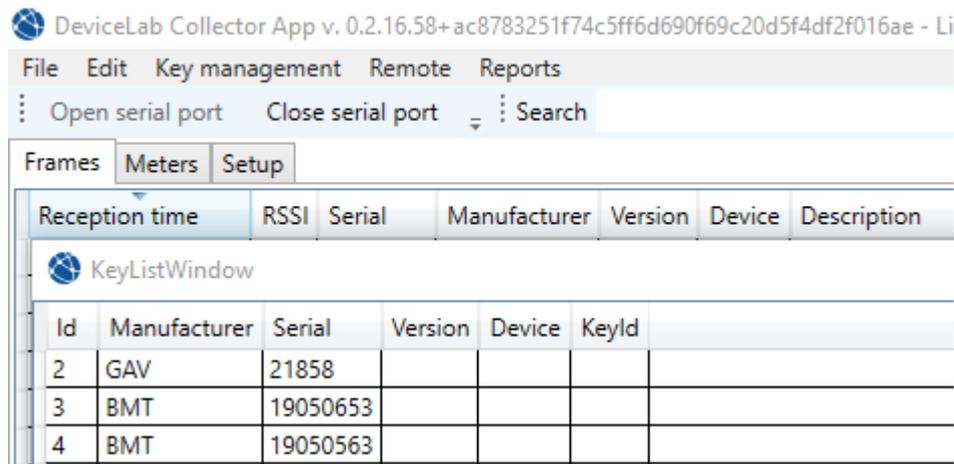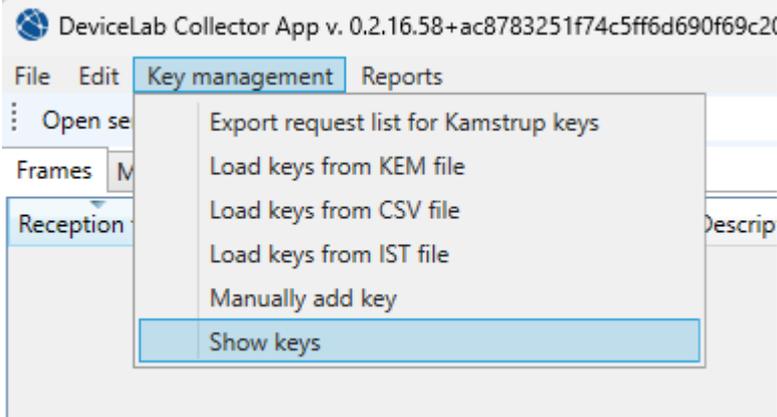

Values and info for devices with loaded key are now shown in Payload Collector:

